


8	9
	A
	1
	В
	C
	D
	E
 	i
	F
REV NO:	1
CREATION DATE:	25/05/2016
 REV DATE:	26/05/2016
DRAWN BY:	R BARNES
CHECKED BY:	MBRADLEY

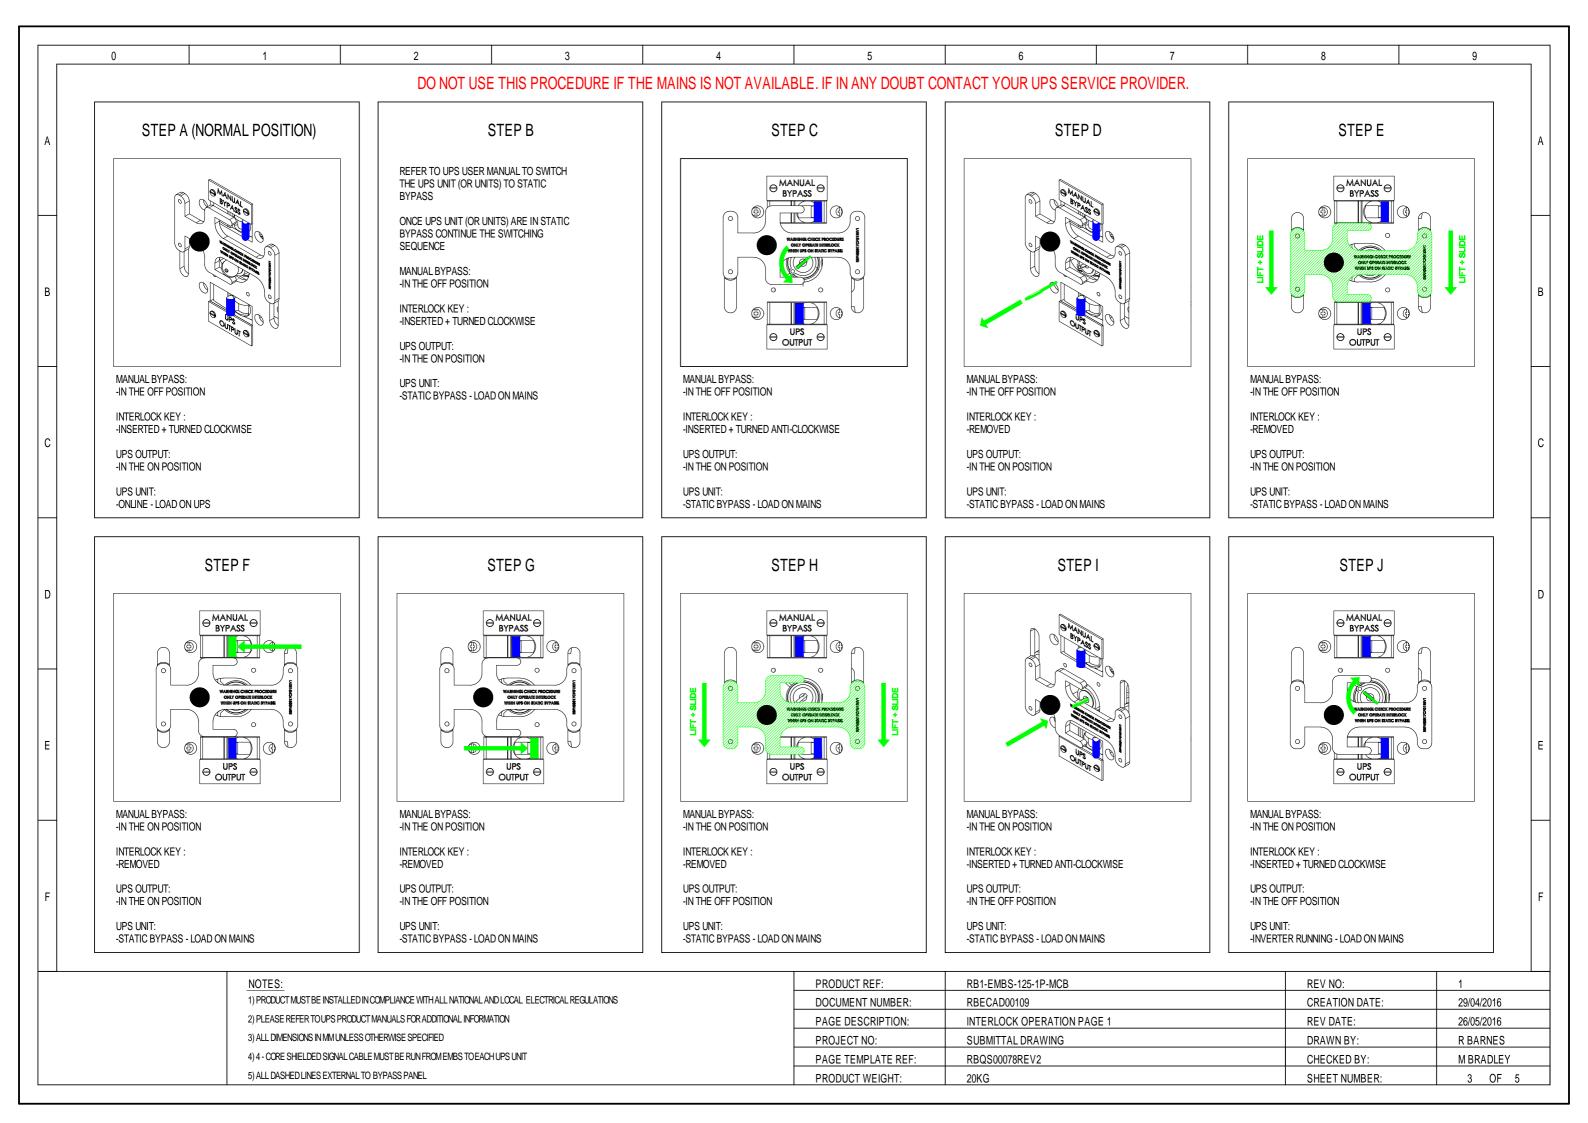

	0 1											
			2 3	4	5	6	7	8	9			
	DO NOT USE THIS PROCEDURE IF THE MAINS IS NOT AVAILABLE. IF IN ANY DOUBT CONTACT YOUR UPS SERVICE PROVIDER.											
	STEP K (ON BYPASS PC		STEP L	ST	EP M	STEP N		STEP O				
A										A		
	THIS PROCEDURE ASSUMES:											
	ALL SWITCH'S ON THE EMBS AND ON THE						AL S BYPASS AL BYPASS					
	UPS UNIT SHOULD STILL BE AS PER STEP J ON THE PREVIOUS PAGE PRIOR				AL O							
	TO PROCEDING						↑ _					
	THE UPS UNIT SHOULD BE IN STATIC					HARDING CITICS PROCESSING Only OPENAL WORKSCO	₹	WARNING CHECK PROCEDURE ONLY OWERT INTRIDOCK WHEN UP ON SAULT STRADE				
	BYPASS AND SHOULD BE READY TO ACCEPT THE SYSTEM LOAD											
В	IF IN ANY DOUBT CONTACT YOUR						•			В		
	UPS SYSTEM SERVICE PROVIDER BEFORE PROCEDING				UPS O							
$\mid \mid \mid$	MANUAL BYPASS: -IN THE ON POSITION		MANUAL BYPASS:	MANUAL BYPASS:		MANUAL BYPASS:		IANUAL BYPASS:		$\left - \right $		
	INTERLOCK KEY :		-IN THE ON POSITION	-IN THE ON POSITION		-IN THE ON POSITION		N THE ON POSITION				
	-INSERTED + TURNED CLOCKWISE			INTERLOCK KEY : -REMOVED		INTERLOCK KEY : -REMOVED		NTERLOCK KEY : REMOVED				
С	UPS OUTPUT: -IN THE OFF POSITION		-INSERTED + TURNED ANTI-CLOCKWISE							с		
	UPS UNIT:		UPS OUTPUT: -IN THE OFF POSITION	UPS OUTPUT: -IN THE OFF POSITION		UPS OUTPUT: -IN THE OFF POSITION		PS OUTPUT: N THE ON POSITION				
	-INVERTER RUNNING - LOAD ON MAINS		UPS UNIT:	UPS UNIT:		UPS UNIT:	U	PS UNIT:				
			-STATIC BYPASS - LOAD ON MAINS	-STATIC BYPASS - LOAD OF	N MAINS	-STATIC BYPASS - LOAD ON MAINS	-9	STATIC BYPASS - LOAD ON MAINS				
r] []								
	STEP P		STEP Q		EP R	STEP S		STEP T				
			UTET Q									
D								REFER TO UPS USER MANUAL TO SWITCH		D		
								HE UPS UNIT (OR UNITS) TO ONLINE IODE				
		\bigcap			AN O			NCE UPS UNIT (OR UNITS) ARE ONLINE				
							I T	HE SEQUENCE IS COMPLETE AND THE DAD IS NOW BACKED UP BY UPS				
	WARMING CHICK PROCESSING ONLY OFBASIC INTELOCK WHEN 475 ON STATIC ITY ASI	Mail Color						IN ANY DOUBT CONTACT YOUR UPS				
								ERVICE PROVIDER				
E								IANUAL BYPASS:		E		
					O D RANK			N THE OFF POSITION				
								NTERLOCK KEY : NSERTED + TURNED CLOCKWISE				
	MANUAL BYPASS:		MANUAL BYPASS:	MANUAL BYPASS:		MANUAL BYPASS:		UPS OUTPUT:				
	-IN THE OFF POSITION		-IN THE OFF POSITION	-IN THE OFF POSITION		-IN THE ON POSITION		N THE ON POSITION				
	INTERLOCK KEY : -REMOVED		INTERLOCK KEY : -REMOVED	INTERLOCK KEY : -INSERTED + TURNED ANTI-	-CLOCKWISE	INTERLOCK KEY : -INSERTED + TURNED CLOCKWISE		PS UNIT: DNLINE - LOAD ON UPS				
	_ UPS OUTPUT: UPS OUTP		UPS OUTPUT:			UPS OUTPUT: -IN THE OFF POSITION						
F			-IN THE ON POSITION	UPS OUTPUT: -IN THE ON POSITION						F		
	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS		UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD OF		UPS UNIT: -STATIC BYPASS - LOAD ON MAINS						
				-STATIC DTFASS - LOAD OF		-STATIC BTE ASS - LOAD ON MAINS						
<u> </u>	NOTES: 1) PRODUCT MUST BE INSTALLED IN COMPLIANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL REGULATIONS				PRODUCT REF:	RB1-EMBS-125-1P-MCB		REV NO:	1			
				DOCUMENT NUMBER:	RBECAD00109 INTERLOCK OPERATION PAGE 2		CREATION DATE:	29/04/2016				
	2) PLEASE REFER TO UPS PRODUCT MANUALS FOR ADDITIONAL INFORMATION 3) ALL DIMENSIONS IN MM UNLESS OTHERWISE SPECIFIED 1) 1. CODE PLEID FOR OWNER AND FOR INTEGED IN FERDING TO FACILITIES UNIT						PAGE DESCRIPTION:	REV DATE:	26/05/2016			
					PROJECT NO: SUBMITTAL DRAWING			DRAWN BY:	R BARNES			
	4) 4 - CORE SHIELDED SIGNAL CABLE MUST BE RUN FROM EMBS TO EACH UPS UNIT 5) ALL DASHED LINES EXTERNAL TO BYPASS PANEL				PAGE TEMPLATE REF:	RBQS00078REV2 20KG		CHECKED BY: SHEET NUMBER:	M BRADLEY			
L					PRODUCT WEIGHT:	ZURU		SHEET NUMBER:	4 OF 5]		

